



## Instruction Sheet

### MI-GWHS18



## INSTRUCTIONS

1. Remove one of the two green end caps from the core. (The end cap should slide off with minimal effort.)
2. Slide your coreless film roll onto the core and make sure to slide it down until the end of the roll reaches the end cap.
3. Reinsert the end cap back into its original position to lock the film roll into place on the core.

888-WRAPTITE (972-7848)

[www.wraptite.com](http://www.wraptite.com)

[info@wraptite.com](mailto:info@wraptite.com)