


MI-EWD1218

Standard Dispenser for 15"-18" Stretch Wrap

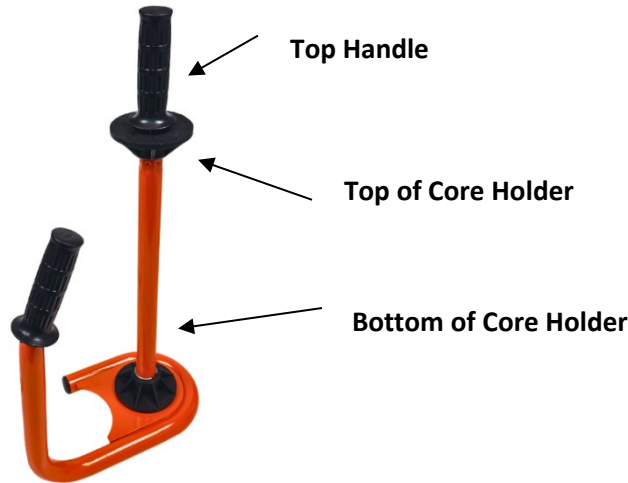

INSTRUCTIONS

1. To load the dispenser, rotate the threaded rod handle counterclockwise and remove it from the dispenser base.
2. Slide your film roll onto the dispenser base and position it on the bottom plastic core holder.
3. Re-insert the threaded rod handle and screw clockwise until plastic top core holder reaches the film core.
4. Align the plastic top core holder with the film core and adjust the tension for optimal performance.

Visit www.wraptite.com to view our other products.

INDUSTRIAL



JAN/SAN



SAFETY



info@wraptite.com

1.888.WRAPTITE (972.7848)