


MI-GWD18

Heavy Duty Magnetic Dispenser for 18" Coreless Film

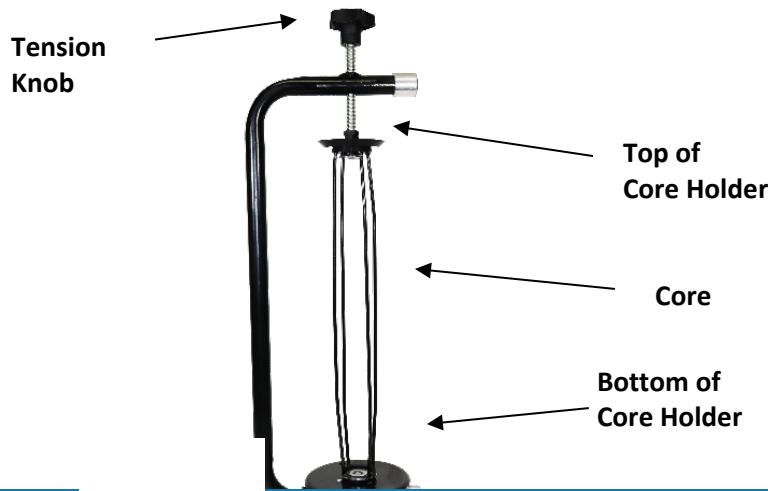

INSTRUCTIONS

1. To load the roll onto the dispenser, unscrew the tension knob located at the top of the dispenser by rotating it counterclockwise.
2. Once loosened, remove the core from the dispenser and slide the core through the center of the film roll.
3. Next, align the core with both the top and bottom core holders.
4. Once aligned, tighten the tension knob by rotating clockwise to secure the core to the dispenser.
5. Adjust the knob to increase or decrease the tension as needed for optimal performance.

Visit www.wraptite.com to view our other products.

INDUSTRIAL



JAN/SAN



SAFETY



info@wraptite.com

1.888.WRAPTITE (972.7848)