


MI-PWD1518

Lightweight Dispenser for 14.5"-18" Pre-Stretch Film

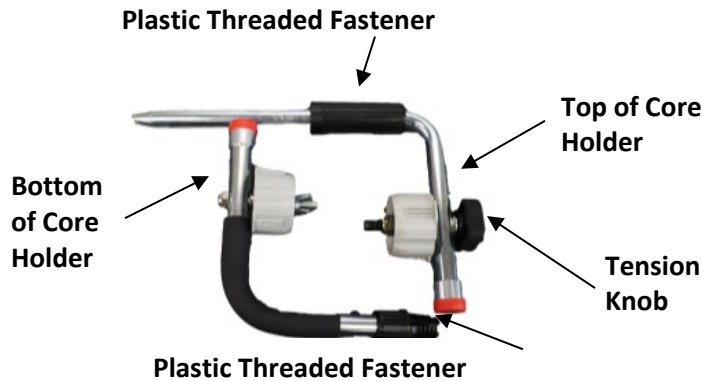

INSTRUCTIONS

1. To load the dispenser, position the film roll onto the bottom plastic core holder.
2. Next, position the film roll onto the top core holder while simultaneously inserting the larger section of the handle into the smaller section. (Be sure to have the plastic core holders completely inserted into the film roll.)
3. Once in position, lock the roll into place by connecting both sections of the handle. Insert the larger handle section into the smaller section and screw them together using the plastic threaded fasteners.
4. For optimal performance, tighten or loosen the top and bottom core holders. The bottom core holder can be accessed by using the tension knob located on the bottom of the dispenser. The top core holder is accessed on the inside of the core holder by adjusting the wing nut.

Visit www.wraptite.com to view our other products.

INDUSTRIAL



JAN/SAN



SAFETY



info@wraptite.com

1.888.WRAPTITE (972.7848)