




# MI-SWD1218

# Heavy Steel Dispenser for 12"-20" Stretch Wrap

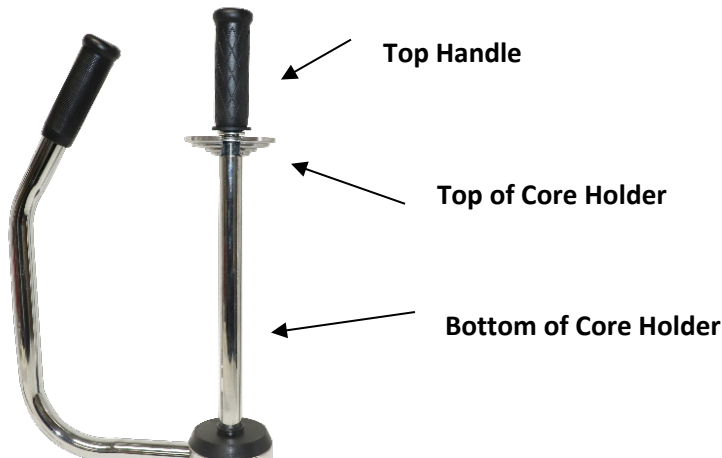

## INSTRUCTIONS

1. To load the dispenser, unscrew the threaded top handle by turning counterclockwise to the point where you can remove the top of the metal core holder.
2. Feed the film roll over the top handle and position it on the bottom core holder.
3. Slide the top of the metal core holder back into place and position it on the top of the film roll core.
4. Screw the top handle clockwise to lock the film roll into place on the dispenser.
5. Adjust the threaded rod top handle as needed for optimal performance based on film width.

Visit [www.wraptite.com](http://www.wraptite.com) to view our other products.

### INDUSTRIAL



### JAN/SAN



### SAFETY



info@wraptite.com

1.888.WRAPTITE (972.7848)