


MI-TDH3

3" Heavy Tape Dispenser

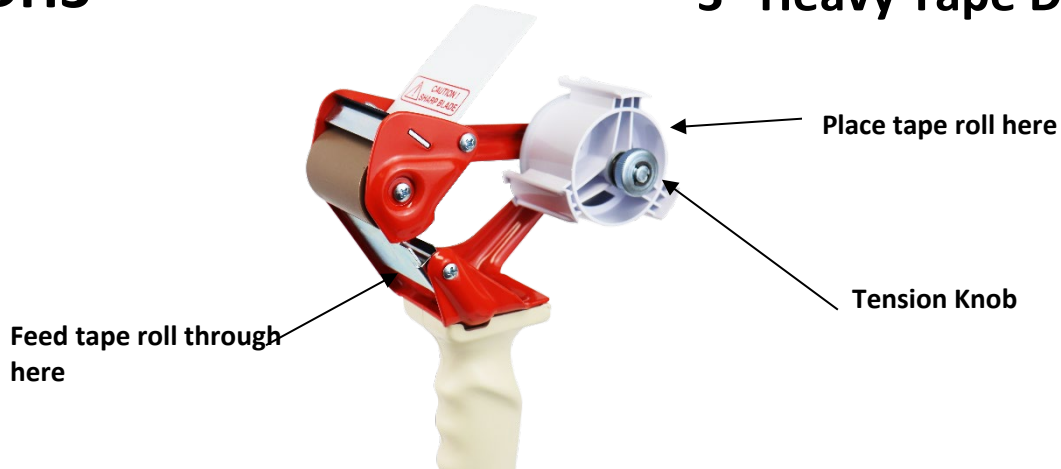

INSTRUCTIONS

1. To load, place 3" width tape roll onto tape wheel and push fully onto the wheel. Be sure to load the tape with the adhesive side down.
2. Unroll approximately 5" of tape and thread the tape through the metal holding plate and the rubber roller.
3. Tighten or loosen the tension knob located on the tape wheel for optimal performance.
4. To operate, glide the dispenser along the desired area while applying downward pressure.
5. When you are done dispensing, tilt the dispenser upward and apply pressure to cut the tape to length.

Visit www.wraptite.com to view our other products.

INDUSTRIAL



JAN/SAN



SAFETY



info@wraptite.com

1.888.WRAPTITE (972.7848)