


# MI-WPH3

# White Plastic Handle for 3" Banding Film

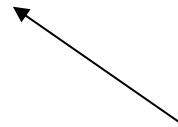

This end goes into film core

## INSTRUCTIONS

1. Insert the handle into the core of the film roll. Be sure that you are using a film with a 3" core.
2. For optimal use, make sure the handle is completely inserted. It should fit snugly in the roll core.

Visit [www.wraptite.com](http://www.wraptite.com) to view our other products.

### INDUSTRIAL



### JAN/SAN



### SAFETY



info@wraptite.com

1.888.WRAPTITE (972.7848)