


MI-WS1220

Wrap-Stik for 12"-20" Stretch Film

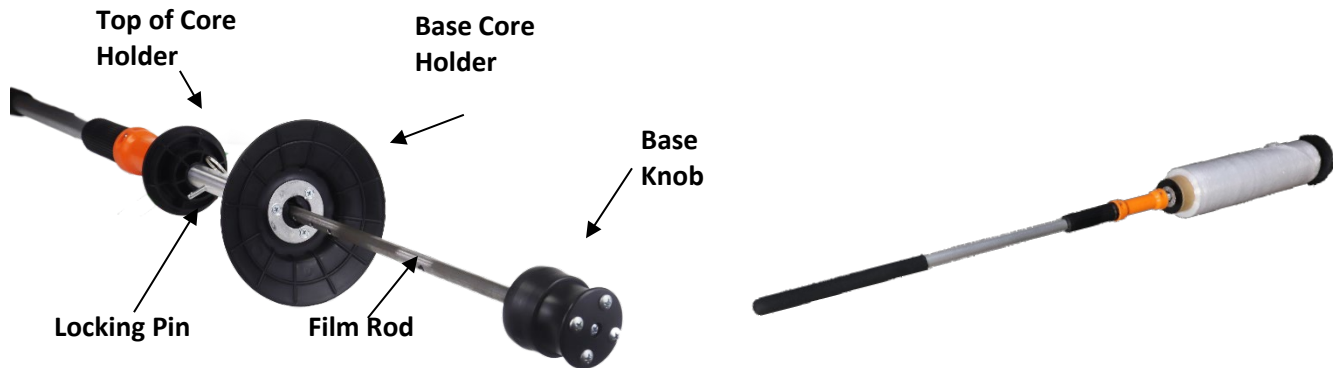

INSTRUCTIONS

1. Start by removing the base knob by applying downward force while also rotating the knob.
2. Once the knob is removed, take off the base core holder and slide your film roll over the film rod, position the film roll on the top core holder.
3. Next, place the base core holder back onto the film rod and slide on top of your film roll.
4. Adjust your locking pin to accommodate for the appropriate height for the width of film you are using to make sure your film is locked into place on the Wrap Stick.
5. Place the base knob back onto the film rod and lock it back into place.

Visit www.wraptite.com to view our other products.

INDUSTRIAL



JAN/SAN



SAFETY



info@wraptite.com

1.888.WRAPTITE (972.7848)